 



The Beiter KLICKER

HINTS - TRICKS

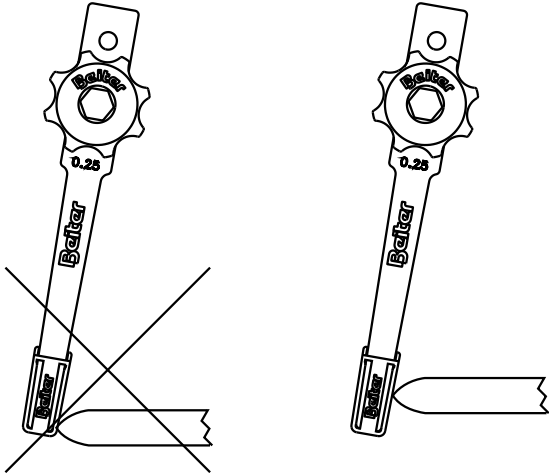

The correct length of the Klicker is very important (see the drawing!), to avoid the arrow jumping after the Klick!

 If the 4 holes on the Beiter Klicker makes it still too short, than you may use 4mm longer Klicker Caps, available in Black or Light.

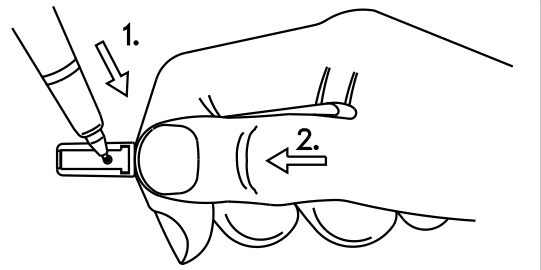

Changing the cap is easy and can be done by following 2 steps:

First push against the pin on the backside with a pencil releasing the cap.

Than slide it out with the thumb.

ATTENTION!!

The Black Blade Klicker can not be bent as the Silver chromed version!

Do not over-bend or deform it, it may brake!!